


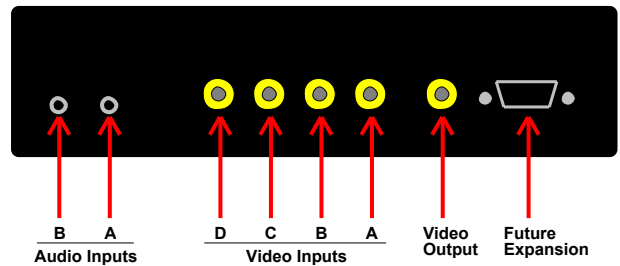


Audio/Video Connections



Other Connections

Power, SD Card Module, Alarm Inputs, and Push Button

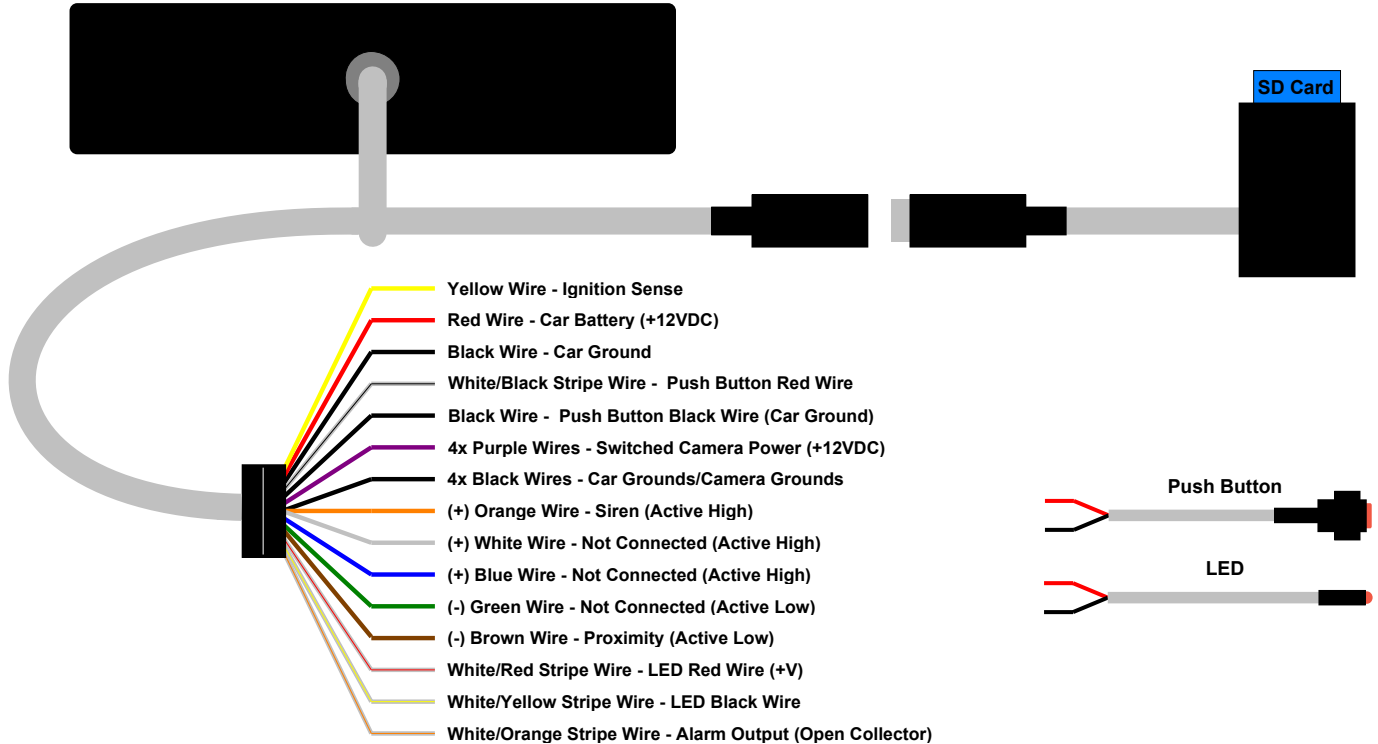

Product Manuals

Because we make changes to the product manuals, please download the latest version on our web site at www.obsusa.com or find a version of the [manual on your Secure Digital Card](#) included with this package.

Installation Overview

This document is our standard installation page for the MobileWatchman™ Audio Video Security System. Install configurations may change depending on your vehicle make or model. This configuration is the default when you receive the unit. It assumes that there will NOT BE AN AFTERMARKET ALARM ATTACHED to the system. If you plan on attaching a trigger to the output of a car alarm you must change the configurations in our software. It also assumes that you will use an ALARM SIREN and proximity sensor as a trigger (though both are optional). You do not need to make any changes if you are not making those connections. To make changes to the installation or features you will need our setup and [viewer software](#) which can be downloaded at www.obsusa.com or [FOUND ON YOUR Secure Digital CARD](#). This software creates new configuration files and install sheets depending on your specific needs. If you are not using an alarm with sensor outputs you will need to make changes to the configuration. Please contact us for further instructions.

Considerations

Please keep in mind that the device is shipped to you in a "sleep" state. To power the system and make it operational you will need to start the ignition and drive your vehicle, letting your vehicle run for at least 15 minutes after your complete install.

- Active High & Active Low are + (positive) and - (negative) triggers and should be treated as such.
- CA Armed stands for Car Alarm Armed and would be the "Armed Output" on many alarms.
- Please disregard the small black wire if there is one in the bundle of trigger wires. It is there for future expansion.

IMPORTANT - The wires in the push button are sensitive to being crossed. If the system is not triggering check this first.

For questions or more information please contact OBS, Inc. at 303-777-2171 or please visit www.obsusa.com.

Thank You